





RJ12/RJ45 cables kits

Termination instructions

1 Select the appropriate cable kit (RJ45 - 8 pin or RJ12 - 6 pin). Please note that only Socomec kits should be used.

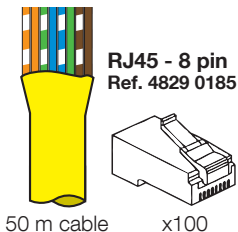

or

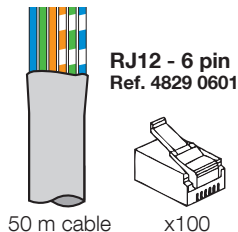


2 Cut the cable to the required length

3 Remove 1cm of insulation from each end

4 Place cable into RJ45 plug (8 wires) or RJ12 plug (6 wires) in the configuration below:

RJ45 colour order	Cable to be laid in to connector as below:	RJ12 colour order	Cable to be laid in to connector as below:
1 White/Orange 2 Orange 3 White/Green 4 Blue 5 White/Blue 6 Green 7 Brown 8 White/Brown	<p>Line 2 Line 1 Line 3 Line 4 1 2 3 4 5 6 7 8</p>	1 Blue 2 Green 3 Orange 4 White/Orange 5 White/Green 6 White/Blue	<p>Line 1 Line 3 Line 2 1 2 3 4 5 6</p>

5 Secure the plugs using an appropriate tool:

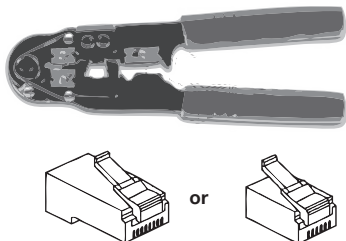

6 Test to ensure that all pins show continuity using a suitable appliance, RJ45 cable (8 pin test) or RJ12 (6 pin test):

